Tyler Stableford's Custom Functions for the Canon EOS 5D Mark II

Many people have asked me which settings I use for white balance, color space, video mode, and custom functions, etc. Here is list of the settings that I 'customize' on my Canon EOS 5D Mark II -- they are simply settings that I find helpful, and are in no way the absolute best method. I hope that you find them useful!

Raw mode. I prefer to shoot only in Raw, rather than Raw+Jpeg, as the camera writes files to the compactflash card faster. Plus, it's so easy to output a Jpeg from a Raw file these days.

	· • • • • •
Quality	RAW
Веер	On
Shoot w/o card	Off
Review time	2 sec.
Peripheral illumin.	correct.

Be sure to turn "Shoot w/o card' to OFF -- otherwise you run the risk of taking photos without a compactflash card in your camera!

6. 6. 6. 0. 🗡
RAW
On
Off
2 sec.
correct.

White Balance. When shooting Raw files outdoors, auto white balance often works just fine as you can easily adjust the white balance afterward in Lightroom. However if you are shooting with strobes or in challenging light conditions, you may want to set a custom setting.

800	Empia
	ç" ç: ç: 🖸 🛧
Expo.comp./AEB	⁻ 21 ⁰ 1.:2
White balance	AWB
Custom WB	
WB SHIFT/BKT	0,0/±0
Color space	Adobe RGB
Picture Style	Neutral
Dust Delete Data	

When shooting jpegs or video, it's crucial to set a custom white balance that is as accurate as possible. Jpegs and video clips are highly compressed files and don't allow for dramatic adjustments in color temperature, so you need to get it right in the camera. The box on the right shows how I set a custom color temperature. Take a test shot or use Live View mode to check your settings, and tailor the settings until the scene looks right.

You can do further white balancing in the WB Shift/ Bkt pane. Selecting this menu brings up the pane below.

Here, I don't use the bracket feature but rather the White Balance Shift options. If your subject's face is showing too much red, try tabbing the cursor to the left one or two clicks. Take another close-up test frame or use Live View, and zoom in to see how the color looks now. Keep experimenting until the scene looks good.

Color Space. I set the camera to capture in Adobe RGB as it has a wider color gamut than sRGB, and as such allows for greater manipulation of the images with less degradation.

White balance Color temp.

Empi	a
	· 6: 6: 🖸 🖈
Expo.comp./AEB	-21012
White balance	AWB
Custom WB	
WB SHIFT/BKT	0,0/±0
Color space	Adobe RGB
Picture Style	Neutral
Dust Delete Data	





Picture Style. This is a crucial custom setting when shooting video, as it allows you to reduce contrast in the clips and to capture a wider range of highlight and shadow detail. It's not as important when shooting Raw files, as Lightroom has calibration settings you can dial while processing your images; but nonetheless I suggest setting things properly here.

Em C	npia
	ç; ç; 🖸 🖈
Expo.comp./AEB	-21
White balance	AWB
Custom WB	
WB SHIFT/BKT	0,0/±0
Color space	Adobe RGB
Picture Style	Neutral
Dust Delete Data	

e O O Emj	pia
Picture Style	0, 0, ‰, 0
≥ SSStandard	3,0,0,0
Z ► P Portrait	2,0,0,0
Z LLandscape	4,0,0,0
ઢ .≍NNeutral	3,-4,0,0
♣FFFaithful	2,-3,0,0
Monochrome	3,0,N,N
INFO. Detail set.	SET OK

My preferred setting is the Neutral picture style, and then I further customize it as seen in the boxes below. Remember that these are just my preferences, so please experiment and find your own if you think a different setting will work better for your needs.

After selecting Neutral, I go into the detailed settings and drag Contrast all the way down. I commonly shoot straight into the sun in the snowy mountains here in Colorado, so I prefer a very low-contrast setting to capture the full range of light and shadow -remember you can always boost contrast later, but it's nearly impossible to recover clipped highlights or shadows if you don't get them in the original file.

The reduced contrast make the image look relatively flat and dull at first, so I add a touch of extra saturation, and this seems to help the overall look of the image.

**See the last page of this PDF to see how to enable the Neutral Picture Style when developing a Raw image in Lightroom.

800	Empia
Detail set.	Z≤N Neutral
Sharpness	0
Contrast	····
Saturation	= +++ 0 +++ =
Color tone	
Default set.	MENU •5
800	Empla
Detail set.	3 .≤NNeutral
Charppace	±

.

□···· 0···· · 3
MENU *5

Auto Exposure Bracketing. When shooting outdoors in changing light conditions, I often bracket my images 2/3 of a stop on either side to make sure I don't clip the highlights.

A O Emp	Ha
	· 🖓 🖓 🏠
Expo.comp./AEB	⁻ 21 ⁰ 1.:2
White balance	AWB
Custom WB	
WB SHIFT/BKT	0,0/±0
Color space	Adobe RGB
Picture Style	Neutral
Dust Delete Data	

This screen shows my settings. Be sure to press the Set button or the bracketing won't register! Also, you'll want to go into the Custom Functions panel and disable the AEB Auto Cancel feature -- please see the section on Custom Function 1-4 further down for details.

Exposure	comp./AEB s	etting	
Darkei		Brigl	hter
1	-210	1.:2	
AEB	uunu	nn	*
		9	ET IOK

Highlight Alert. I like having Highlight Alert enabled; when reviewing the image on the LCD screen, the clipped highlights will blink white. I don't always attempt to capture all the highlights, but nonetheless I find it helpful to know what's being lost.

Highlight alert	Enable
AF point disp.	Disable
Histogram	RGB
Slide show	
lmage jump w/m	10 images

Histogram. I set my histogram to display in all three channel of Red, Green and Blue. Skin tones often appear in the red channel, giving me a more accurate idea of the exposure on a model's face.

A A A Emp	
	· · · · · ·
Highlight alert	Enable
AF point disp.	Disable
Histogram	RGB
Slide show	
lmage jump w/m	10 images

Auto Power Off. When shooting video and using Live View to preview a scene, I like to set at least 4 minutes of time before Live View shuts off. This isn't as important for stills, and will drain the camera's battery faster.

Auto power off	4 min.
Auto rotate	On💻
Format	
File numbering	Continuous
Select folder	

Auto Rotate. I set the camera to rotate images only when ingested to the computer, and not on the back of the camera. This way I can view vertical images using the camera's full LCD screen for a larger preview.

Video System. NTSC is the preferred system for most uses in the U.S.A.

Live View/Movie Function Settings. This menu is the biggie for shooting video. It also controls the Live View settings, which can be very helpful for honing focus when shooting stills on a tripod. See the boxes below for my preferred settings.

\star

00	Empia
	🖌 💽 🥺 🖓
LCD brightness	*
Date/Time	03/04/'11 11:00
Language	English
Video system	NTSC
Sensor cleaning	
Live View/Movie	func. set.

#0 /3	Empia
	· 🖓 🚱 🚱 🔭
LCD brightness	**
Date/Time	03/04/'11 11:01
Language	English
Video system	NTSC
Sensor cleanin	g
Live View/Mov	rie func. set.

This image shows my preferred settings for video and live view. I like having the grid enabled to help keep horizons straight.

**Disable Silent Shooting to make sure your camera operates at full-speed frame rates; when enabled, the camera doesn't shoot as fast.

-I don't pay much attention to AF Mode as autofocus doesn't work well with the mirror up in Live View; I find it better to either autofocus with the Live View mirror down, or focus manually using 5X and 10X magnification feature while in Live View.

ia		
Live View/Movie func. set.		
Grid 2 ##		
Disable		
16 sec.		
Live mode		
1920x1080 30		
Auto		

	Empia			
Live View fund	ction settings			
→ Stills+movie				
Movie displa	y 🛄 DISP.			
LV func. setting				
Disable				
Stills only				
Stills+movie				
MENU Cancel	SET Next			

00	Empia
Live View func	tion settings
Stills+movie	₩ + •
Movie display	Y TDISP.
Scre	en settings
Stills display	
Exposure simul	lation
Movie display	
MENU Previous	SET OK

000	Em	npia	-	
THE DISP.				
AFLive				
1920 (30 11:49 RAW				
160 3.5 ⁻² .,1.,•,	1,12	[133] [SO 1600 I)+ •

Click on the LV Func Setting to go deeper into this menu. Here, I select Still + Movie mode. Press the Set button to go deeper.

Next, in the Screen Settings dialogue, select Movie Display. This will enable a histogram during live view mode.

Here is a snapshot of the camera's LCD screen while in live view mode, with the RGB histogram enabled. Press the Info button to cycle the histogram etc on and off. Another important setting in the Live View/Movie Function Setting pane is the Movie Recording Size, which selects both movie size and the frame rate. I commonly choose a 30p frame rate (30 frames per second) over the 24p frame rate as it allows me to capture better action clips of skiing etc. However many people prefer 24p, so check with your client for their needs first.

Sound Recording. For run-and-gun style shooting outdoors with a shotgun video microphone attached to the camera's hotshoe, I prefer setting sound levels to Auto. When shooting indoors with controlled sound levels, it's better to dial in the sound levels in the Manual mode.

Custom Functions. Below are the settings that I customize, begging with the Exposure panel.

C.Fn I-3, ISO Expansion. Turn this on to enable shooting as low as ISO 50 and as high as ISO 25,600.

Live View/Movie f	unc. set.
) 1920x1080 ाउँ₀
	19ZUX 1060 430
Movie rec. size	1920x1080 430

AOO	Empla	-	
Sound recording			
Sound rec.	Auto		
Rec. level	F	-1	
-dB 40 L	12	0	
R	MEN	- 0*5	



	Empia
C.Fn I :Exposure ISO expansion	3
0:Off	
1:0n	
1 2 3 4 5 6 7 0 0 1 1 0 0 0	

C.Fn I-4, Bracketing auto cancel. Turn this to Off; otherwise the camera will cancel bracketing after only one sequence of three shots.

0	O Empla	
	C.Fn I :Exposure Bracketing auto cancel	4
	0:0n	
	1:Off	
	1 2 3 4 5 6 7 0 0 1 1 0 0 0	

51 61 51 51 61 61 61 🧰

C.Fn I :Exposure C.Fn II :Image

C.FnⅢ:Autofocus/Drive C.FnⅣ:Operation/Others Clear all Custom Func. (C.Fn)

Next let's go to the C.Fn.II panel.

C.Fn II-2. I find that Lightroom's noise-reduction features are very robust, so I turn down the in-camera noise reduction to Low.

C.Fn II-3, Highlight Tone Priority. This setting enables the camera to capture a greater range of detail in highlights like backlit snow, clouds and water. Turning this setting on will make ISO 200 the lowest possible ISO.

800	Empia	
C.Fn II : Image High ISO speed	d noise reduct'n	2‡
0:Standard		
1:Low		
2:Strong		
3:Disable		
1 2 3 4		



C.Fn II-4, Auto Lighting Optimizer. This setting essentially brightens the shadows in a scene; it can be helpful when shooting run-and-gun video without a lighting crew. Try it at a Low setting and experiment to see if you like it; it's a judgement call. This setting applies only to Jpeg and Video files; it does not affect Raw files.

I skip the C.Fn III panel as there's nothing I customize there, and continue to C.Fn IV.

C.Fn IV-1, Shutter Button and Auto Focus. I select option 2 which moves autofocus controls to the AF-ON button rather than the shutter button. This way I can focus with my thumb on the AF-ON button, which I find more helpful when tracking a moving subject in AI Servo autofocus mode.

Here is a snapshot of the various 'quick-view' settings I enable for easy access, using My Menu Settings. In the My Menu Settings dialogue, you can Register a range of menu settings for quick access. Click Register to view the full list and add a setting; click Delete to remove unneeded settings from the panel.

Empla	
C.Fn II : Image Auto Lighting Optimizer	4
0:Standard	
1:Low	
2:Strong	
3:Disable	
1 2 3 4 0 1 1 1	



C.Fn IV:Operation/Others Shutter button/AF-ON button 0:Metering + AF start 1:Metering + AF start/AF stop 2:Metering start/Meter+AF start 3:AE lock/Metering + AF start 4:Metering + AF start/Disable 1 2 3 4 5 6 2 0 0 0 0 0

	v 🖓 🕼 🗖 📩
Expo.comp./AEB	-211
Highlight tone price	ority
Live View/Movie f	unc. set.
White balance	AWB
Highlight alert	Enable
My Menu settings	

Speedlites: When you have a Speedlite attached to your camera (not needed with the 7D as it has a pop-up flash capable of serving as a wireless transmitter), you can use this pane to control both your on-camera flash as well as all wireless flashes.

Click the "External Speedlite Control' button and then the 'Flash Function Settings' button to access the control panel.

I prefer 2nd curtain shutter sync, it allows me to shoot at a slow shutter speed and have the flash freeze the action at the close of the shutter. I use Hi-Speed sync when shooting above 1/250th of a second, handy for sports etc.

Wireless Settings will less you control your wireless flashes right from this pane.

5 5 5 5 6 6 🖓 6 😿

Battery info.INFO. buttonNormal disp.External Speedlite controlCamera user settingClear settingsFirmware Ver. 1.1.0

External Speedlite control	
Flash function settings	
Flash C.Fn settings	
Clear all Speedlite C.Fn's	
	MENU ·

Chutter ours	1 at anytain	-1
Shutter sync.	1st curtain	
	2nd curtain	
	Hi-speed	

Flash function set	ttings
FEB	-3210123
Flash exp. comp	⁻ 21 ⁰ 1.:2
E-TTL II	Evaluative
Zoom	Auto
Wireless set.	
Flash firing	Enable
INFO. Clear Speed	dlite settings

Here you can choose to enable or disable your 'Master Flash,' which is your on-camera flash. Make sure that 'Wireless func' above is Enabled if you want to trigger wireless flashes.

Here you can choose to have all flashes work together as one TTL unit (A+B+C), or set ratios of two wireless flash groups (A:B) or three flash groups (A:B C).

This is what the Wireless Settings panel looks like when I'm ready to shoot with three wireless flashes (or three groups of wireless flashes, as you can add multiple flashes to each group if desired).

Under the Flash Custom Function Settings under 'External Speedlite Control "(see the image on the previous page), I often disable auto-power-off so the wireless flashes don't go to sleep. It can be a hassle to wake them up, but it runs the batteries down more quickly.

Happy shooting!

Wireless func.	Enable
Master flash	Disable
Channel	1 ch
Firing group	A+B+C
A:B fire ratio	2:1 1:1 1:2
Grp.C exp. comp	-321012.*3

Wireless set.		
Firing group	A+B+C	
	A:B	
	VA.D	

Wireless func.	Enable
Master flash	Disable
Channel	1 ch
Firing group	A:B C
A:B fire ratio	2:1 • 1:1 • 1:2
Grp.C exp. comp	-321



Addendum: Using Lightroom to develop Raw files with specific Picture Style settings.

The Picture Style settings you select on the camera don't automatically apply when processing Raw files in Lightroom. Here's how to select the style you want: scroll down to the bottom right panel in the Develop mode to Camera Calibration, and click the fly-down menu for Profile. I select Camera Neutral, which replicates the Neutral Picture Style.

